

### Pump Repair Kits

1) Switch Assembly	N/A
2) Check Valve Assembly	94-237-00
3) Upper Housing	N/A
4) Valve Assembly	94-232-00
5) Diaphragm/Lower Housing	94-238-03
6) Motor	11-185-06
7) Complete Pump Head	94-236-14
8) Upper Housing/Switch Assy	94-231-10

